



PD-M406

PD-M426

多片唱碟鐳射唱機

# 使用說明書

Español

中國語

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

This player is for consumer use. If the player is used in a business (for example, used for a period at a restaurant), the player will not be covered under warranty.



## LINE VOLTAGE SELECTOR SWITCH

Means (95% CI) for each group are 10.2 (9.2-11.2) and 20.0 (18.9-21.1) for the two groups.

[illegible]

- [illegible]



221240

1992-1993

## IMPORTANT



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

### CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN

**CAUTION:**  
TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Information to User

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.


### CAUTION

- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- The use of optical instruments with this product will increase eye hazard.

## CONTENTS

|  |    |
|--|----|
| CONFIRM SUPPLIED ACCESSORIES               | 3  |
| PUT BATTERIES INTO THE REMOTE CONTROL UNIT | 3  |
| REMOTE CONTROL OPERATIONS                  | 3  |
| CAUTIONS REGARDING HANDLING                | 4  |
| BEFORE OPERATING THE PLAYER                | 5  |
| CONNECTIONS                                | 6  |
| NAMES AND FUNCTIONS OF PARTS               | 7  |
| BASIC OPERATION                            | 8  |
| VARIOUS OPERATIONS                         | 9  |
| TO PLAY ONLY DESIRED TRACKS/DISCS          | 11 |
| TROUBLESHOOTING                            | 14 |
| SPECIFICATIONS                             | 14 |

## CONFIRM SUPPLIED ACCESSORIES

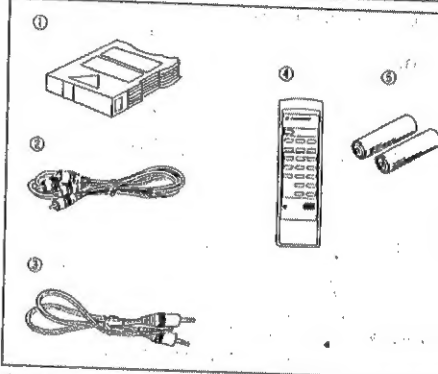

- ① 6-Compact Disc Magazine x 1  
(Called 6-disc magazine in the explanatory text.)

### NOTE:


The supplied 6-disc magazine is for 12 cm (5-inch) disc only.

- ② Output cable x 1  
③ Control cable x 1  
④ Remote control unit x 1 (PD-M426 only)  
⑤ AAA/R03 dry cell batteries x 2 (PD-M426 only)

### POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.

## PUT BATTERIES INTO THE REMOTE CONTROL UNIT (PD-M426 only)

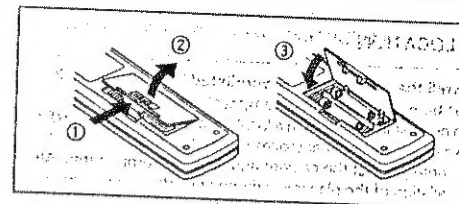

Open the lid of the battery compartment on the rear of the remote control unit, and insert the batteries (size "AAA" (IEC R03)), taking care to align the  $\oplus$  and  $\ominus$  polarities correctly.

### NOTES:


- In order to prevent battery leakage, remove the batteries when not using the remote control unit for an extended period (one month or more). If leakage occurs, carefully wipe away any battery fluid inside the compartment, and replace the batteries with new ones.
- Do not allow books or other objects to rest on top of the remote control unit, since the buttons may be depressed, causing faster exhaustion of the batteries.

Incorrect use of batteries may cause leakage or rupture. Always be sure to follow these guidelines:

- A. Always insert batteries into the battery compartment correctly matching the positive  $\oplus$  and negative  $\ominus$  polarities, as shown by the display inside the compartment.
- B. Never mix new and used batteries.
- C. Batteries of the same size may have different voltages, depending on brand. Do not mix different brands of batteries.

## REMOTE CONTROL OPERATIONS (PD-M426 only)

When operating the remote control unit, point the unit's infrared signal transmitter at the remote control receiver (REMOTE SENSOR) on the front panel of the player. The remote control unit can be used within a range of about 7 meters (23 feet) from the remote sensor, and within angles of up to about 30 degrees.

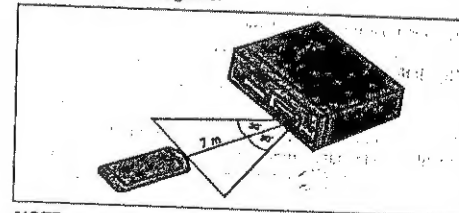

### NOTE:

If the remote control sensor window is in a position where it receives strong light such as sunlight or fluorescent light, control may not be possible.

### NOTE for PD-M406:

Operate the PD-M406 using the remote control unit which accompanies the amplifier. (See page 6.)

## CAUTIONS REGARDING HANDLING

### LOCATION

Install the player in a well ventilated location where it will not be exposed to high temperatures or humidity. Do not install the player in a location which is exposed to direct rays of the sun, or near stoves or radiators. Excessive heat can adversely affect the cabinet and internal components. Also, installation of the player in a damp or dusty environment may result in a malfunction or accident.

### PRECAUTIONS REGARDING INSTALLATION

Avoid placing the player on heat-generating sources such as amplifiers.

Install this compact disc player as far as possible from tuners and TV sets. Noise may be particularly noticeable when an indoor antenna is used. In such cases, make use of an outdoor antenna, or turn off power to the compact disc player.

Please place this unit on a level surface.

### CLEANING THE PLAYER AND THE MAGAZINE

Clean the PLAYER and the MAGAZINE, wipe with a soft, dry cloth. For stubborn dirt, wet a soft cloth with a mild detergent solution made by diluting one part detergent to 5 or 6 parts water, wring well, then wipe off the dirt. Use a dry cloth to wipe the surface dry. Do not use volatile liquids such as benzene and thinner which are harmful to the unit.

### STORING DISCS

Be careful not to allow discs to warp; always store discs in their cases vertically, avoiding locations with high heat or humidity, or extremely low temperatures.

### CD LENS CLEANER


The player's pickup lens should not become dirty in normal use, but if for some reason it should malfunction due to soiling, consult your nearest PIONEER authorized service center. Lens cleaners for CD players are commercially available, but special care should be exercised in their use since some may cause damage to the lens.

### CONDENSATION

When this unit is brought into a warm room from previously cold surroundings or when the room temperature rises suddenly, condensation may form inside, and the unit may not be able to attain its full performance. If this occurs, allow the unit to stand for about an hour or raise the room temperature gradually.

### CLEANING AND HANDLING COMPACT DISCS

- Always keep your discs clean by wiping them gently with a soft cloth from the inner edge toward the outer periphery.
- If a disc becomes very dirty, dip a soft cloth in water, and after wringing it out well, wipe the dirt away gently, and then remove any water drops with another soft, dry cloth.
- Do not use record cleaning sprays or anti-static agents on discs. Also, never clean discs with benzene, thinner, or other volatile solvents, since damage to the disc surface may result.
- With this player, use discs which display the mark shown below. (Optical audio digital discs.)
- When holding discs, do not touch their signal surfaces (the side reflecting a "rainbow" pattern, opposite the label side). Hold by the edges, or by one edge and the center hole.
- Do not affix gummed labels or tape to the label surfaces. Also, do not scratch or damage the label.
- Discs rotate at high speed inside the player. Do not use damaged (cracked or warped) discs.

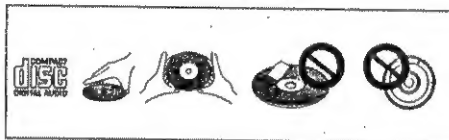

#### NOTES:


- In order to play an 8-cm (3-inch) CD you will need a special Multi CD Magazine (JD-M108, JD-M308) which is sold separately. Be sure to thoroughly read the Operating Instructions before using it.
- 8-cm (3-inch) CD Adapters  
It is possible that even an adapter which meets recommended standard CD specifications will not be usable with the CD player. It is recommended that the special Multi CD Magazine (JD-M108, JD-M308) be used.
- Never load an 8-cm (3-inch) CD or its adapter into a standard 12-cm (5-inch) magazine. This may seriously damage the CD player.
- Do not insert only an 8-cm (3-inch) disc and adapter into the supplied magazine.

## BEFORE OPERATING THE PLAYER


### INSERT DISCS INTO THE 6-DISC MAGAZINE

Insert any discs which you may have into the supplied magazine. Up to six discs may be inserted. The numbering of the discs begins with 1 at the topmost tray, and then increases in order downwards to 6 for the lowest tray. The magazine has a window through which the pulled-out disc tray can be checked. Even during playback, the number of the disc being played back can be checked through this window.

#### 1. Pull out only one disc tray.

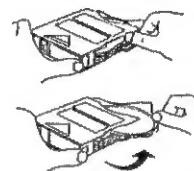

#### 2. Position discs with the label side downward.

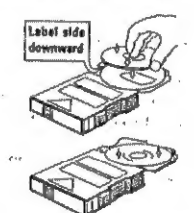

#### 3. Put the disc tray back as it was originally.




#### 4. Insert other discs by repeating steps 1 to 3.

#### CAUTIONS:

- Please make sure to only pull out one disc tray at a time. (When a disc tray has been pulled out, do not pull out other disc trays.)
- If discs are inserted label side upward, it will not be possible for them to be played. Please make sure to insert them with the label side downward.
- Objects other than discs (song cards, explanations of disc contents, etc.), must never be inserted into the disc trays.
- Do not touch the playing surface of discs (iridescent side) with hands or fingers.

### AFFIXING LABELS TO THE MAGAZINE

- Always attach the labels provided in the designated locations. Correct operation may not be possible if labels or tape are attached in other locations.
- The following are convenient ways of using labels:  
A: For titles  
B: For disc names  
C: For classification
- Do not attach labels on top of other labels.

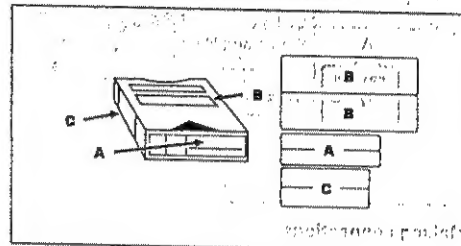


Additional magazines identical to the one supplied are available as options (\*JD-M100, JD-M200, JD-M300, JD-M108, JD-M308). Please use them to make your own disc library, with separate magazines for each artist or genre.

- \* JD-M100/JD-M200/JD-M300 ..... Magazine for 12-cm (5-inch) discs
- JD-M108/JD-M308 ..... Magazine for 8-cm (3-inch) discs

#### NOTE:

Do not load 8-cm (3-inch) discs into the magazine for 12-cm (5-inch) discs.

CONNECTIONS

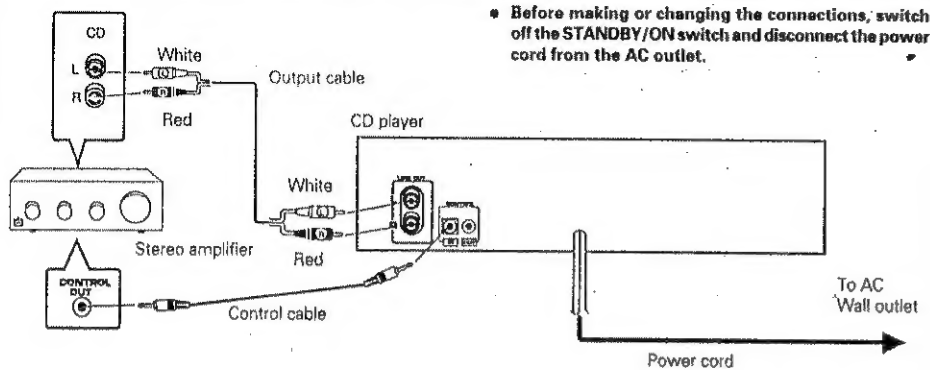

Before making or changing the connections, switch off the **STANDBY/ON** switch and disconnect the power cord from the AC outlet.

**making connections**  
Connect the **LINE OUT** jacks of this unit to the input jacks (CD or AUX) of the amplifier. Make sure that the white plugs are connected to the left (L) jacks and the red plugs to the right (R) jacks.  
• Be sure not to connect this unit to the amplifier's **PHONO** jacks, as sound will be distorted and normal playback will not be possible.  
Connect the power cord to a household AC wall outlet or an AC outlet on your amplifier.  
• Make sure plugs are inserted fully into the jacks and wall outlet.

- NOTES:**
- When a control cord is connected to the player's **CONTROL IN** jack, direct control of the player with the remote control unit is not possible. Operate the player with the remote control unit by aiming it at the amplifier.
  - Be sure to connect both of the control cord's plugs securely to the **CONTROL IN** and **CONTROL OUT** terminals. Do not connect only one end of the cable.
  - Be sure to turn off the power of the amplifier before connecting the power cord and output cord.

**Connecting the power cord**  
Connect the power cord to a household AC wall outlet or an AC outlet on your amplifier.  
• Make sure plugs are inserted fully into the jacks and wall outlet.


AC POWER CORD CONNECTION AND FUNCTIONS

Some functions cannot be carried out depending on the connection of AC power cord.


| Function              | When the AC power cord is connected to the switched outlet of an amplifier or audio timer | When the AC power cord is connected to the unswitched outlet of an amplifier or wall outlet |
|-----------------------|---|---|
| Timer playback        | Yes   | No  |
| Program memory        | No  | Yes   |
| Delete program memory | No  | Yes   |

For details, refer to the description of each function in these Operating Instructions.

NAMES AND FUNCTIONS OF PARTS

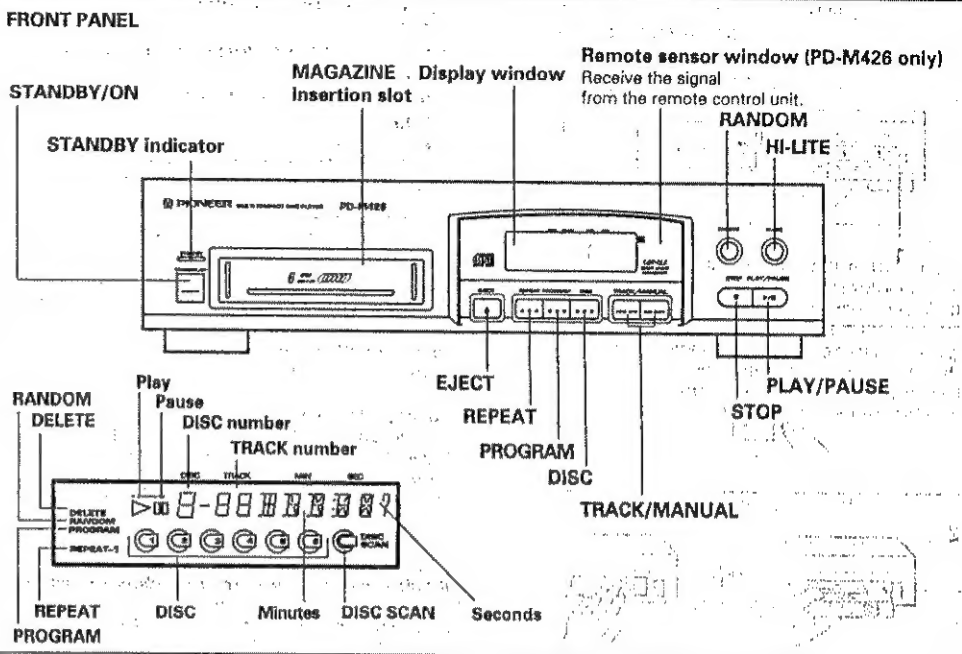

REMOTE CONTROL UNIT (PD-M426 only)

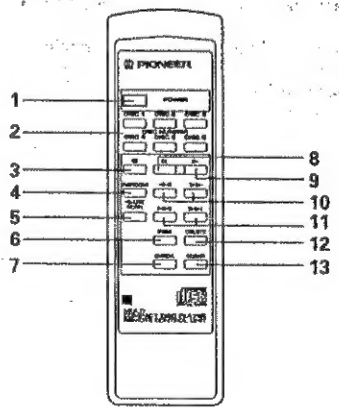


Remote control buttons with the same names or marks as buttons on the front panel of the player control the same operations as the corresponding front panel buttons.

- 1 POWER button
- 2 DISC NUMBER buttons (DISC 1-DISC 6)
- 3 STOP button (■)
- 4 RANDOM button
- 5 HI-LITE button
- 6 PGM (program) button
- 7 CHECK button
- 8 PAUSE button
- 9 PLAY button (▶)
- 10 MANUAL search buttons (◀, ▶)
- 11 TRACK search buttons (◀◀, ▶▶)
- 12 DELETE button
- 13 CLEAR button



## BASIC OPERATION

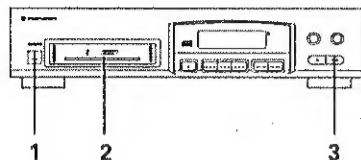

### TO PLAY A COMPACT DISC

1. Press the **STANDBY/ON** switch to turn the power on.
2. Insert a magazine, pushing it in until a click sound is heard.
  - Insert the discs to be played into the magazine beforehand. (Refer to "BEFORE OPERATING THE PLAYER" on page 5.)
  - When the power is turned off (in standby mode), inserting a magazine automatically turns on the power (Automatic Power On function).
3. Press the **▶/II** button to start playback.

#### To pause playback temporarily:

Press the **▶/II** button during playback. The **II** indicator lights and playback is paused at that point. Pressing the **▶/II** button again or **▶** button resumes playback from the position where pause mode was entered.

#### To stop playback:

Press the **■** button. The player returns to the beginning of the first track on the disc at which playback was stopped. If the **■** button is pressed twice, the player returns to the beginning of the first track on the first disc and enters stop mode.

#### NOTE:


When the power is turned off while a magazine is in the player, the player memorizes which disc was played just before the power was turned off. Thus, when the power is next turned on, pressing the **▶/II** button starts playback from the first track on the memorized disc.

#### To stop playback and take out the magazine:

Press the **EJECT** button (▲), remove the magazine, and then press the **STANDBY/ON** switch to turn off the power. Even when the power is turned off (in standby mode), the magazine will be ejected by pressing the **EJECT** button.

#### Cautions regarding handling of magazines:

- When inserting a magazine into the player, make sure that the direction of insertion is correct.
- After use, store in the case provided. Do not place in locations subject to high temperatures or exposed to direct sunlight.
- Do not take magazines apart.
- Be careful not to drop, or hit magazines against things. Also do not apply strong force to trays which have been withdrawn.
- Application of benzene, thinner, insecticide or other volatile liquids to a magazine may damage the surface, so keep magazines away from such substances.

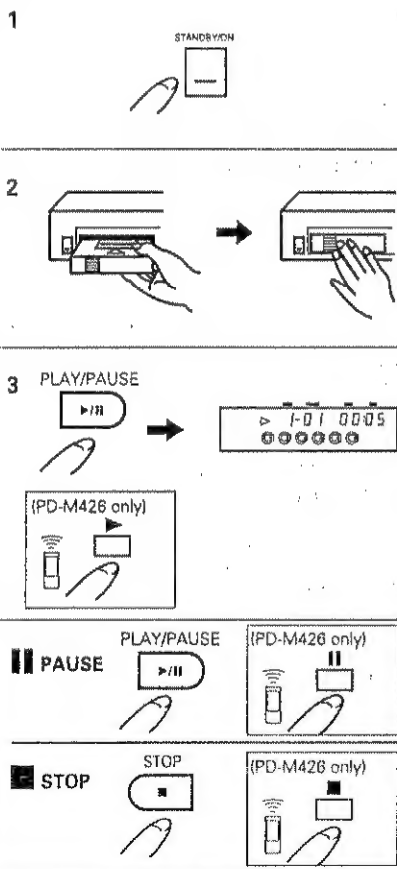


Operations indicated the [ ] mark are performed with the remote control unit. (PD-M426 only)

## VARIOUS OPERATIONS

### DISC SEARCH - TO SEARCH FOR A PARTICULAR DISC

During playback or stop mode

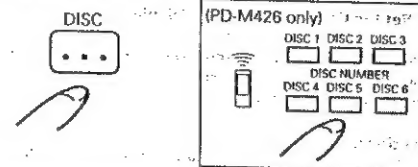


Use the **DISC** button to select the desired disc number, then press the **▶/II** button, or one of the **DISC NUMBER** (**DISC 1-DISC 6**) buttons; the player will then search for the selected disc and begin playback from the beginning of the disc.

#### NOTES:

- If "no DISC" appears on the display, you have pressed the disc number of a tray which does not contain a disc.
- During program playback, Disc Search cannot be carried out.

### TRACK SEARCH - TO SEARCH FOR A PARTICULAR TRACK

During playback, pause or stop mode

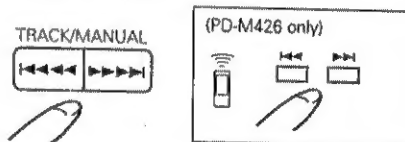

When the **▶▶▶▶** button is pressed once or a number of times, playback advances to the beginning of a track located after the track being played. The position of the located track corresponds to the number of times the button is pressed. When the **◀◀◀◀** button is pressed once, playback returns to the beginning of the track being played. When this button is pressed more than once, playback is returned to a track located before the track being played.


- When the **▶▶▶▶** button or **◀◀◀◀** button is operated in pause mode or stop mode, press the **▶/II** button to start playback.

#### NOTES:

- During program playback, the **▶▶▶▶** (or **▶▶▶**) button or **◀◀◀◀** (or **◀◀◀**) button can be used to select the programmed track.
- During normal playback, Track Search can be carried out on one disc only. In stop mode, this operation can be carried out from 1st track through 99th track.

### MANUAL SEARCH - TO SEARCH FOR A PARTICULAR PASSAGE

During playback or pause mode

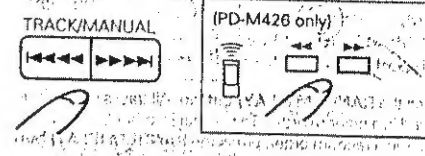

While the **▶▶▶▶** button is kept pressed, playback rapidly advances toward the end of the disc. When playback reaches the end of the disc, the player enters pause mode and "END" is displayed. While the **◀◀◀◀** button is kept pressed, playback rapidly reverses toward the beginning of the disc. When the desired passage is reached, release the **▶▶▶▶** button or **◀◀◀◀** button. The player enters original mode (playback or pause) where **▶▶▶▶** button or **◀◀◀◀** button is released.

#### NOTES:

- During normal playback, Manual Search can be carried out on one disc only.
- During program playback, Manual Search can be carried out in one program step only.

### TO REPEAT PLAYBACK (REPEAT PLAY)

REPEAT

 


To repeatedly play the displayed track, press the **REPEAT** button once. The **REPEAT-1** indicator lights. The **REPEAT** button can be pressed in any playback mode.

To repeatedly play all tracks on all of the discs in normal playback mode or in the specified playback mode (Program playback, Delete program playback or Random playback), press the **REPEAT** button twice. The **REPEAT** indicator lights.

- To exit repeat mode, press the **REPEAT** button so that the **REPEAT-1** or **REPEAT** indicator goes off.


# RANDOM PLAYBACK - TO PLAY ALL TRACKS IN RANDOM ORDER



Press the **RANDOM (PLAY)** button. All tracks on all discs are played in a random order. To play tracks other than the deleted tracks in a random order, press the **RANDOM (PLAY)** button after carrying out the Delete Program procedure. See "Delete Program Playback" on page 13.

## MAGAZINE HI-LITE SCAN

 During stop mode



When the **HI-LITE (SCAN)** button is pressed once during stop mode, playback starts from a point 1 minute after the beginning of the first track, and the first track of each disc is played for about 10 seconds. The DISC SCAN indicator blinks during Disc Scan mode. After the first tracks of all discs are scanned, the player enters stop mode.

When the **HI-LITE (SCAN)** button is pressed twice during stop mode, playback starts from a point 1 minute after the beginning of the track, and each track is played for about 10 seconds. The SCAN indicator blinks during Track Scan mode. After all tracks of all discs are scanned, the player enters stop mode.

### To exit Magazine Hi-Lite Scan mode:

Press the **■**, **▶/II** or **DISC NUMBER (DISC 1-DISC 6)** button. When the **▶/II** button is pressed, normal playback starts from the current point. When the **DISC NUMBER (DISC 1-DISC 6)** button is pressed, the selected disc is played from the beginning.

### NOTES:

- Hi-Lite Scan can be carried out from the desired elapsed time of the track. During playback, press the **HI-LITE (SCAN)** button at the point you want to start Hi-Lite Scan playback. The player memorizes the minute and second of the point and Track Scan playback is carried out from the memorized point on each track.
- Each time the **HI-LITE (SCAN)** button is pressed, the mode switches between Disc Scan and Track Scan.
- Programming of only desired tracks is possible during Track Scan playback. See "Direct program" on page 12.
- During Track Scan playback, you can skip to the desired track with the **◀◀** button or **▶▶** button.
- When the **REPEAT** button is pressed, Hi-Lite Scan playback will be repeated.
- When playback time of a track is less than one minute or is shorter than the memorized time, Hi-Lite Scan playback is carried out from the beginning of the track for about 10 seconds. When playback time of a track is less than 10 seconds, the track is played from the beginning to the end.

### Timer playback:

By using a commercially available audio timer, it is possible to initiate playback at any time automatically.







1. Insert a magazine into the magazine slot.
2. Set the time at which you wish playback to begin. The timer will supply power to both the amplifier and the player at the preset time, turning all the components on and initiating the playback mode. Playback starts from the first track on the first disc.

### Cautions:

- Do not unplug the power cord or do not turn off the power with an audio timer during playback, as this could result in damage to the disc.
- If a power failure occurs while the power is turned off (standby mode), the power is automatically turned on with the timer playback function when the power is restored.

**THEREFORE, DISCONNECT THE AC POWER CORD WHEN THE PLAYER IS NOT USED FOR A LONG PERIOD OF TIME.**

## TO PLAY ONLY DESIRED TRACKS/DISCS

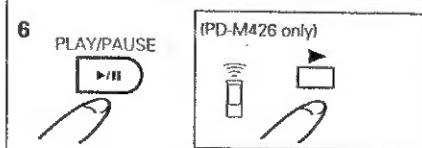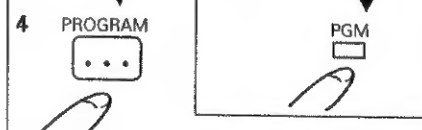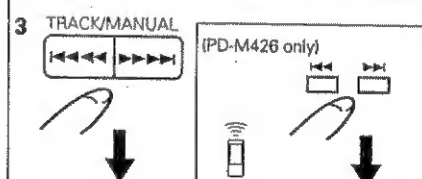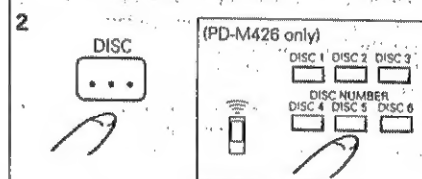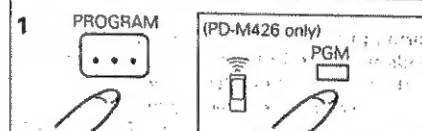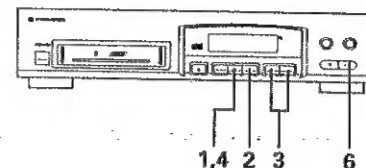

## PROGRAM PLAYBACK - TO PROGRAM TRACKS/DISCS IN DESIRED ORDER

1. With the player stopped, press the **PROGRAM** button, so that the **PROGRAM** indicator lights.
2. Use the **DISC** button or one of the **DISC NUMBER (DISC 1-DISC 6)** buttons to select the desired disc number. The selected disc number will be displayed.
3. Then, press the **◀◀** or **▶▶** button to select the desired track. The selected track number will be displayed.
4. Finally press the **PROGRAM** button, or wait for about two seconds; the program will be stored in memory.

If the **PROGRAM** button is pressed after selecting only the disc number, the 'AL' indicator will appear, indicating selection of the "Disc All Program" mode (the entire contents of the disc is entered into the program as a single step). While the 'AL' indicator is displayed, however, if the **◀◀** or **▶▶** button is used to designate a track number and the **PROGRAM** button is then pressed (or after two seconds elapses), the selected track will be stored as that program step.

5. Repeat steps 2, 3 and 4 to program other tracks.
6. Press the **▶/II** button. The tracks are played in the programmed order. When all programmed tracks have been played, the player enters stop mode.

### NOTE:

When a track is selected with the **◀◀** or **▶▶** button, in step 3, the displayed track number is automatically programmed if the **◀◀** or **▶▶** button is not pressed within 2 seconds. Therefore, be sure to press the **◀◀** or **▶▶** button sequentially until the desired track number appears on the display.

To stop Program playback, press the **■** button.

### To exit program mode:

During program playback, select a **DISC** number with the **DISC NUMBER** button and then press the **▶/II** button. The player enters normal playback mode and playback starts from the beginning of the selected disc.

- Programs containing up to 32 steps can be created.
- To go to the previous or next step in a program, press the **◀◀** or **▶▶** button.
- If the magazine is in the player, the program contents will not be erased even if the power is turned off.

### NOTE:

During Delete programming the **PROGRAM** button cannot be operated.

## TO PLAY ONLY DESIRED TRACKS/DISCS

### Direct Program:

During normal playback or Magazine Hi-Lite Scan playback, a track being played can be programmed.

Press the **PROGRAM** button to enter the program mode.

To search for a desired track during normal playback, it is possible to skip to succeeding tracks by pressing the **1<<<<** or **>>>>1** button.

Also, Magazine Hi-Lite Scan function can be used to move from track to track through the disc.

If you wish to program the track currently playing, press the **PROGRAM** button while the track is playing.

Direct programming is not possible during program playback.

### To check the program contents (PD-M426 only):

During program mode, set the player to stop mode and press the **CHECK** button on the remote control unit. The program contents will be displayed in the programmed order.

After confirming the last program step, the display will show "0-00".

### PROGRAMMING A PAUSE (PD-M426 only)

Setting a pause in your program can be very useful when trying out recording. Press the **II** button on the remote control unit instead of entering a track number. "PA" appears on the display panel.

For example, when recording on both sides of a cassette tape, if you program a pause after the last track to be recorded on the first side, program playback will pause at that point to allow you to switch tape sides. To resume program playback after the player enters pause mode, press the **II** button on the remote control unit or **>II** button on the front panel.

### NOTES:

A pause can be programmed only when the program procedure is performed under stop mode.

A pause cannot be programmed at the beginning of a program (P-01), nor can two pauses be programmed one after the other.

A pause inserted in a program is counted as one step.

If a pause is programmed as the last step of a program, the player will not enter the pause mode.

### To erase a program (PD-M426 only):

During program mode, press the **CLEAR** button on the remote control unit.

The last program step is erased and the contents of the previous program step are displayed.

#### NOTE:

Contents of a program can be erased during playback as well. However tracks preceding the currently playing track cannot be erased in this way.

### To clear all of the program contents:

A. During stop mode, press the **II** button.

B. When the magazine is ejected, the program contents will be cleared.

### To modify the program contents (PD-M426 only):

1. During program mode, set the player to stop mode and press the **CHECK** button on the remote control unit so that the program step to be corrected appears on the display.



2. Enter the new disc number with the **DISC NUMBER (DISC 1-DISC 6)** buttons and then press the **1<<<<** or **>>>>1** button so that the new track number appears on the display.

3. Press the **PROGRAM** button.

• Repeat steps 1 through 3 to change other tracks as desired.

• If the **1<<<<** or **>>>>1** button is not pressed within 2 seconds when correcting the track number, the displayed track number is automatically memorized.

## TO PLAY ONLY DESIRED TRACKS/DISCS

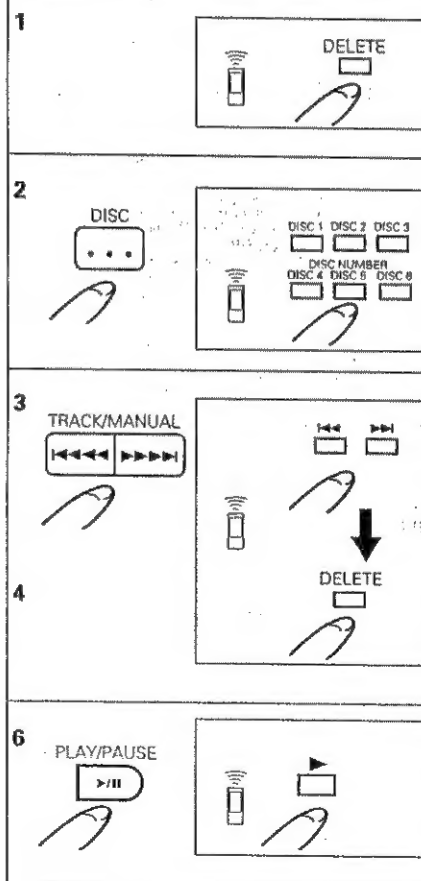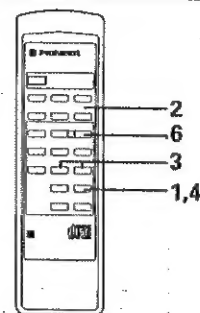

### DELETE PROGRAM PLAYBACK - TO DELETE UNDESIED TRACKS/DISCS (PD-M426 only)

1. With the player stopped, press the **DELETE** button, so that the **DELETE** indicator lights.

2. Use the **DISC** button or one of the **DISC NUMBER (DISC 1 - DISC 6)** buttons to select the disc number.

The selected disc number will be displayed.

3. Then, press the **1<<<<** or **>>>>1** button to select the track number.

The selected track number will be displayed.

4. Press the **DELETE** button, or wait two seconds; the track to be deleted will be input.

If the **DELETE** button is pressed after selecting the disc number only, the "AL" indicator will appear, indicating selection of the "Disc All Delete" mode (the entire disc contents will be deleted from the program memory). While the "AL" indicator is displayed, however, if the **1<<<<** or **>>>>1** button is used to designate a track number and the **DELETE** button is then pressed for after two seconds elapses, the selected track will be deleted as that program step.

5. Repeat steps 2, 3 and 4 to delete other tracks.

6. Press the **>II** button.

All tracks other than deleted tracks/discs are played in the order of the discs and track numbers. When tracks have been played, the player enters stop mode.

#### NOTE:

When a track is selected with the **1<<<<** or **>>>>1** button in step 3, the displayed track number is automatically programmed if the **1<<<<** or **>>>>1** button is not pressed within 2 seconds. Therefore, be sure to press the **1<<<<** or **>>>>1** button sequentially until the desired track number appears on the display.

To stop Delete program playback, Press the **II** button.

- Track number 33 or above cannot be deleted.
- To go to the previous or next disc/track other than the deleted disc/track, press the **1<<<<** or **>>>>1** button.
- If the magazine is in the player, the delete program contents will not be erased even if the power is turned off.

#### NOTE:

After programming for Program playback or during Program playback mode, Delete programming can not be carried out.

### To clear all of the Delete program contents:

A. During stop mode, press the **II** button.

B. When the magazine is ejected, the program contents will be cleared.

C. Press the **CLEAR** button on the remote control unit during stop mode or play mode. When the **CLEAR** button is pressed during Delete program playback mode, the player enters normal playback mode.

## TROUBLESHOOTING

Incorrect operations are often mistaken for trouble and malfunctions. If you think that there is something wrong with this component, check the points below. Sometimes the trouble may lie in another component. Investigate the other components and electrical appliances being used. If the trouble cannot be rectified even after exercising the checks listed below, ask your nearest PIONEER authorized service center or your dealer to carry out repair work.

| Symptom   | Cause   | Remedy   |
|---|---|--|
| Magazine is not expelled when the EJECT button is pressed.                          | • Power plug is disconnected from outlet.   | • Connect plug to amplifier or wall outlet.  |
| When playback is started, it stops immediately. Pauses or stops during playback.    | • Disc is loaded upside down.<br>• Smudges, etc., on the disc.  | • Load the disc correctly with the label side DOWN.<br>• Clean the smudges from the disc and then play it again.   |
| No sound  | • Output cords are connected incorrectly or loosely.<br>• Incorrect operation of stereo amplifier.<br>• Pin plugs and/or amplifier terminals are dirty.<br>• Player is in pause mode. | • Connect properly.<br>• Check the settings of amplifier switches and sound volume controls.<br>• Clean away dirt.<br>• Press the ►/II ► or III button.  |
| Sound is distorted, noise is output.  | • Incorrect connections.<br>• Pin plugs and/or amplifier terminals are dirty.<br>• Interference is being picked up from a TV set.   | • Connect to amplifier's AUX or CD terminals. Do not connect to PHONO terminals.<br>• Clean away dirt.<br>• Switch OFF TV set, or move player away from TV set.  |
| The picture of the TV screen is fluctuating or FM broadcast has noise interference. | • Interference is being picked up from the CD player.   | • Unplug the AC power cord, or move the player away from TV or tuner.  |
| Remote control will not function. (PD-M426 only)                                    | • Dead batteries.<br>• Too far from player or wrong angle.<br>• Obstruction between player and remote control unit.   | • Replace batteries.<br>• The distance between remote control unit and player should be no more than about 7 meters (23 feet).<br>• The operational angle against the front panel is within 30° from right or left end of player.<br>• Relocate remote control unit or remove obstruction. |

Abnormal functioning of this unit may be caused by static electricity, or other external interference. To restore operation, turn the power off and then on again, or unplug the AC power cord and then plug it in again.

## SPECIFICATIONS

### General

|                          |   |
|--------------------------|---|
| Type                     | Compact disc digital audio system   |
| Power requirements       | AC 110-127/220-240 V (switchable), 50/60Hz                                |
| Power consumption        | 12 W  |
| Operating temperature    | +5°C to +35°C<br>(+41°F to +95°F)   |
| Weight (without package) | 3.7 kg (8 lb, 3 oz)   |
| External dimensions      | 420(W) x 294 (D) x 105 (H) mm<br>16-9/16 (W) x 11-9/16 (D) x 4-1/8 (H) in |

### Audio section

|                    |  |
|--------------------|--|
| Frequency response | 2 Hz ~ 20 kHz  |
| Output voltage     | 2.0 V  |
| Wow and flutter    | Limit of measurement<br>(0.001% W.PEAK) or less (EIAJ) |
| Channels           | 2-channel (stereo)                                     |

### Output terminal

 
Audio line output  
Control input/output jacks

### Accessories

|   |   |
|---|---|
| • Remote control unit (PD-M426 only)        | 1 |
| • Size AAA/R03 dry batteries (PD-M426 only) | 2 |
| • Six-compact-disc magazine                 | 1 |
| • Control cable                             | 1 |
| • Output cable                              | 1 |
| • Operating instructions                    | 1 |

### NOTE:

Specifications and design subject to possible modification without notice, due to improvements.


The Magazine Type Multi CD Players with  mark and the Magazines with the same mark are compatible for 5 inch (12 cm) discs.

Published by Pioneer Electronic Corporation.  
Copyright © 1997 Pioneer Electronic Corporation.  
All rights reserved.

## ÍNDICE

|  |    |
|--|----|
| CONFIRMACIÓN DE LOS ACCESORIOS                           | 15 |
| INSTALACIÓN DE LAS PILAS EN LA UNIDAD DE CONTROL REMOTO  | 16 |
| OPERACIÓN A CONTROL REMOTO                               | 16 |
| PRECAUCIONES REFERENTES AL MANEJO                        | 17 |
| ANTES DE UTILIZAR EL REPRODUCTOR                         | 18 |
| CONEXIONES   | 19 |
| NOMBRES Y FUNCIONES DE LOS CONTROLES                     | 20 |
| FUNCIONAMIENTO BÁSICO                                    | 21 |
| DIVERSAS OPERACIONES                                     | 22 |
| PARA REPRODUCIR SOLAMENTE LAS CANCIONES/ DISCOS DESEADOS | 24 |
| SOLUCIÓN DE PROBLEMAS                                    | 27 |
| ESPECIFICACIONES   | 27 |

## CONFIRMACIÓN DE LOS ACCESORIOS

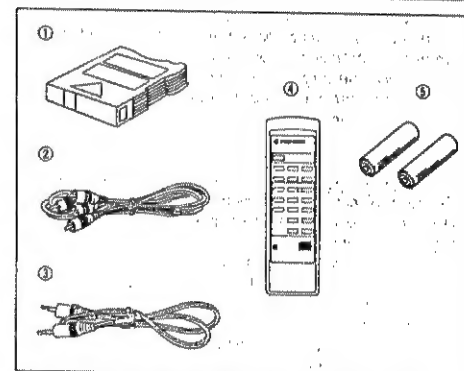

① 1 cartucho de 6 discos compactos (Llamado cartucho de 6 discos en las explicaciones.)

### NOTA:

El cartucho de 6 discos compactos es sólo para discos de 12 cm.

- ② 1 cable de salida
- ③ 1 cable de control
- ④ 1 unidad de control remoto (sólo en el PD-M426)
- ⑤ 2 pilas secas (AAA/R03) (sólo en el PD-M426)

Gracias por la adquisición de este producto Pioneer. Para saber cómo utilizar correctamente su modelo, lea cuidadosamente este manual de instrucciones. Después de haber finalizado su lectura, guárdelo en un lugar seguro para futuras referencias.

En algunos países o regiones, la forma de la clavija de alimentación y de la toma de corriente pueden ser diferentes a la indicada en las ilustraciones explicatorias, sin embargo el método de conexión y operación de la unidad es idéntico.

**ADVERTENCIA:** PARA EVITAR INCENDIOS Y DESCARGAS ELÉCTRICAS, NO EXPONGA ESTE APARATO A LA LLUVIA NI A LA HUMEDAD.

